
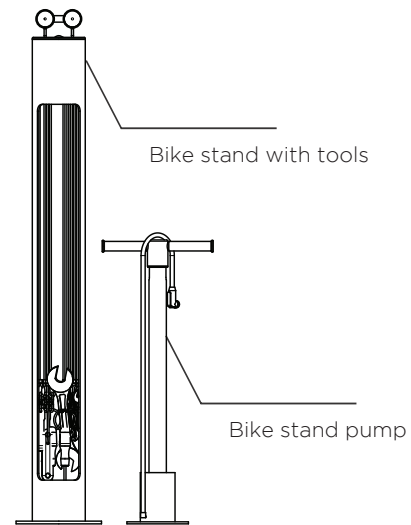



Bike Rack Installation Instructions

Cora Bike Rack - Bike Maintenance Stand


This instruction sheet is to be used for installation of the Cora Bike Maintenance Stand

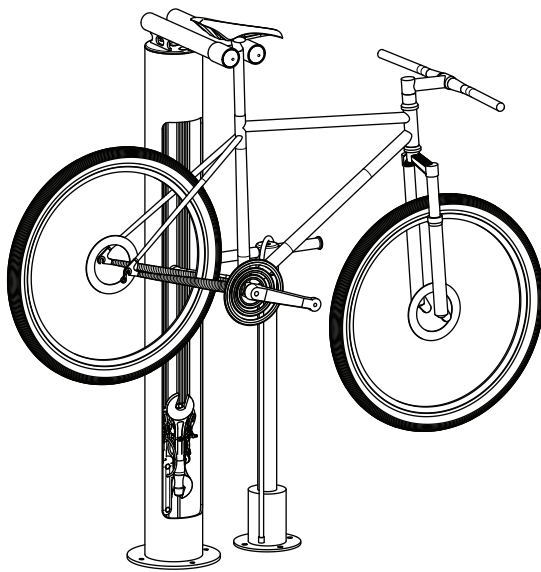

Components for Bike Stand used in assembly

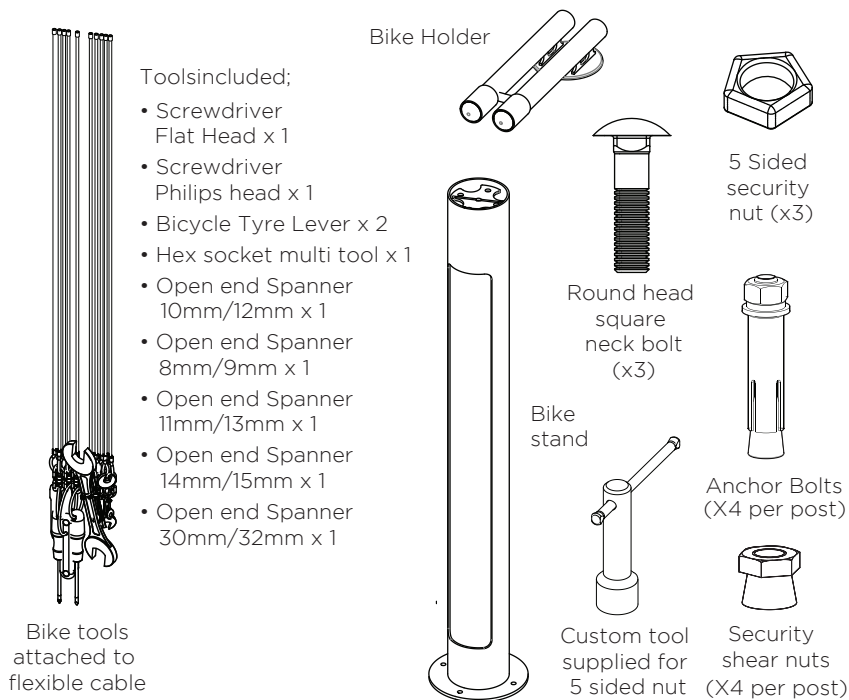

Components for Bike Stand Pump used in assembly

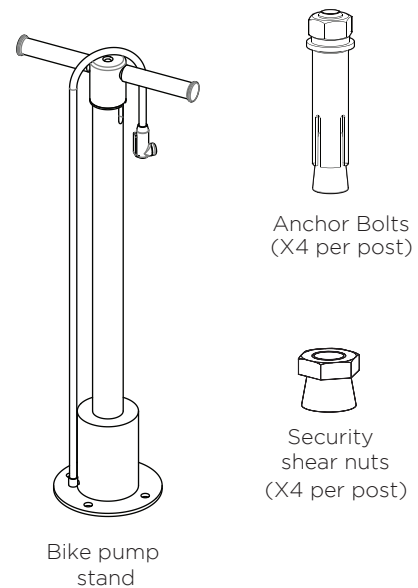

1. Site selection

When selecting a site for your bike maintenance stand, the most important advice is - **do not try to hide it, as it will not be used!** Suitable locations include;

- Adjacent to entrance doors and in line of sight of a window
- Near high pedestrian traffic
- A flat location at the same surface level which cyclists use for access
- Covered areas



Other things to remember;

- The bike maintenance stand should be placed where bicycles are currently parked

Bike Rack Installation Instructions

Cora Bike Rack - Bike Maintenance Stand

2. Access and clearance

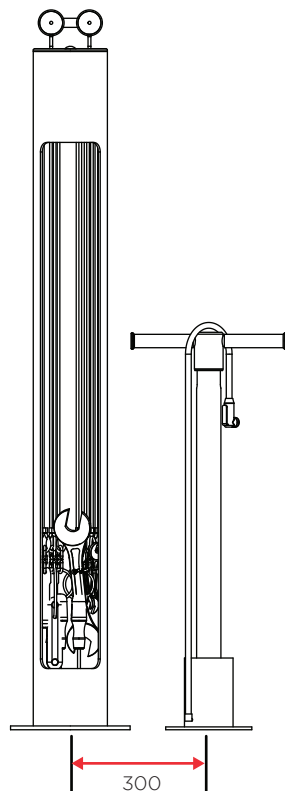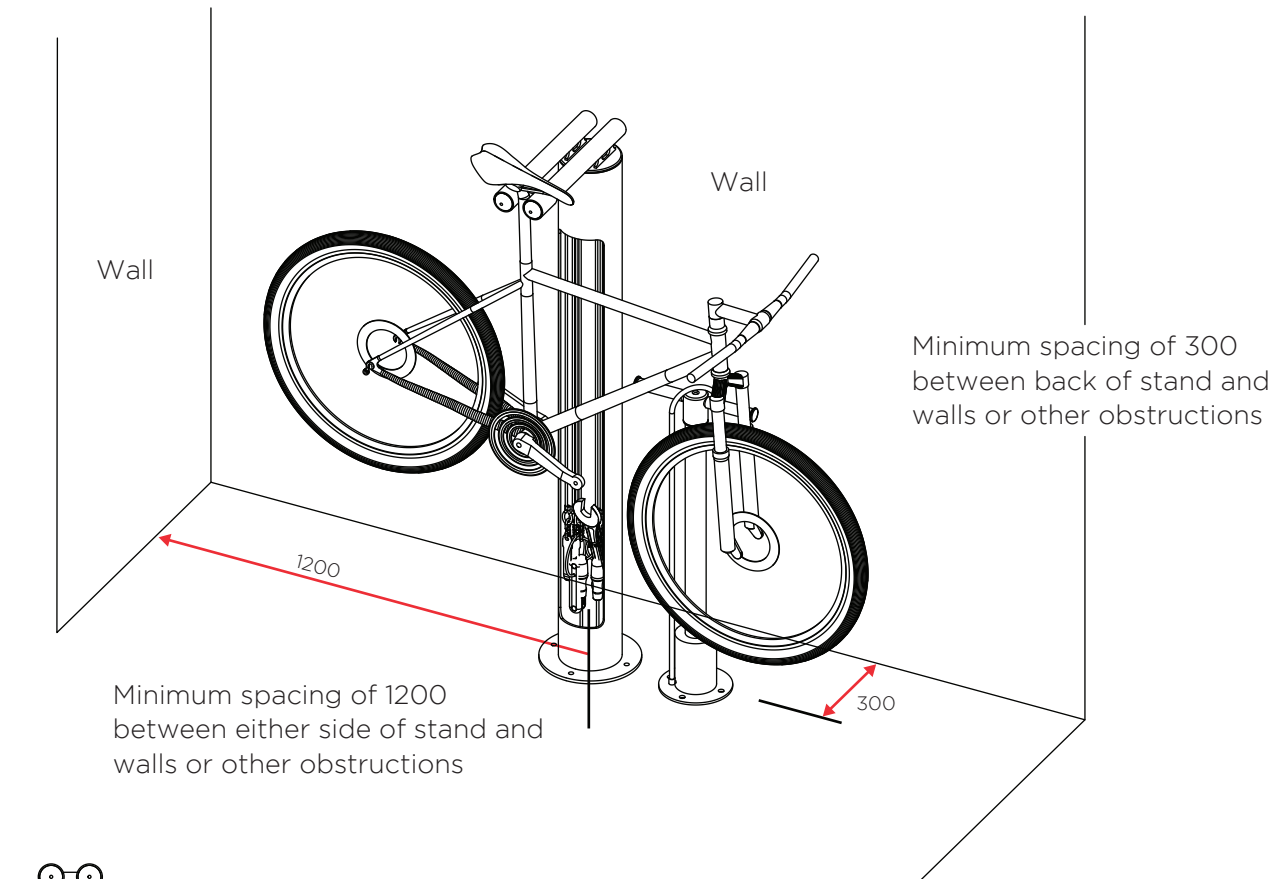

Minimum spacing of 300 between stand and pump (centre to centre)


Access dimensions around bike maintenance stand

- Before mounting stand, find a suitable place that will allow for minimum spacing dimensions
- Ensure minimum spacing from walls, bike racks or obstructions to allow for minimum access

Bike Rack Installation Instructions

Cora Bike Rack - Bike Maintenance Stand

3. Drill holes for maintenance stand and bike pump in location

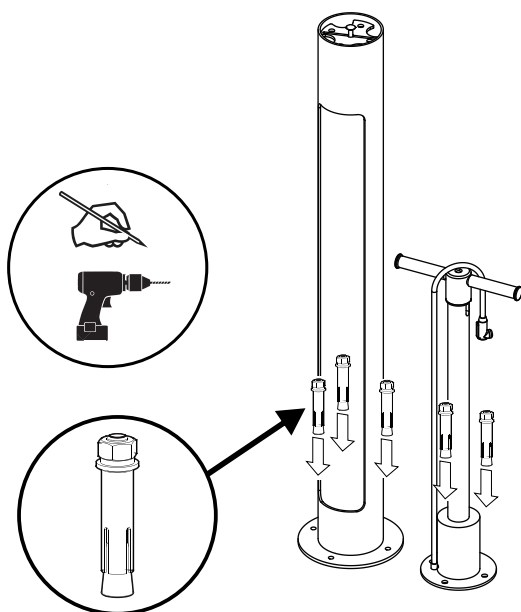


- Use the anchorbolts included
- Place maintenance stand and pump stand in the desired location, ensuring correct clearance on all sides
- Place an pencil through the footing holes to mark the correct position
- Remove stands and drill 80mm deep holes into the concrete using a standard hammer drill. Repeat using a 13mm drill. Clear holes of dust

Do not drill over plumbing and/or electrical conduits, or through waterproof membranes that may be located just below surface level.

- Place stands back into correct positions, place the flat washers and standard nut on to the anchorbolt, and hammer the bolts into place. Tighten nuts firmly

4. Adding the security nuts

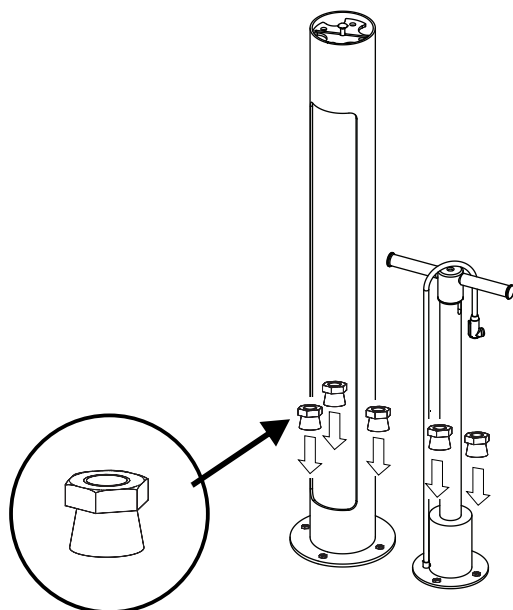


- To use the included security shear head nuts, carefully remove the tightened standard nuts, leaving the flat washers in place
- Screw on the new security nuts with the wide round base at the bottom
- Tighten the security nut firmly, and keep tightening until the top half of the nut snaps off
- Remove the top half of the Security Nut and discard. The lower half remains in place to provide an effective tamper resistant fixing


Bike Rack Installation Instructions

Cora Bike Rack - Bike Maintenance Stand

5. Attach the bike stand tools

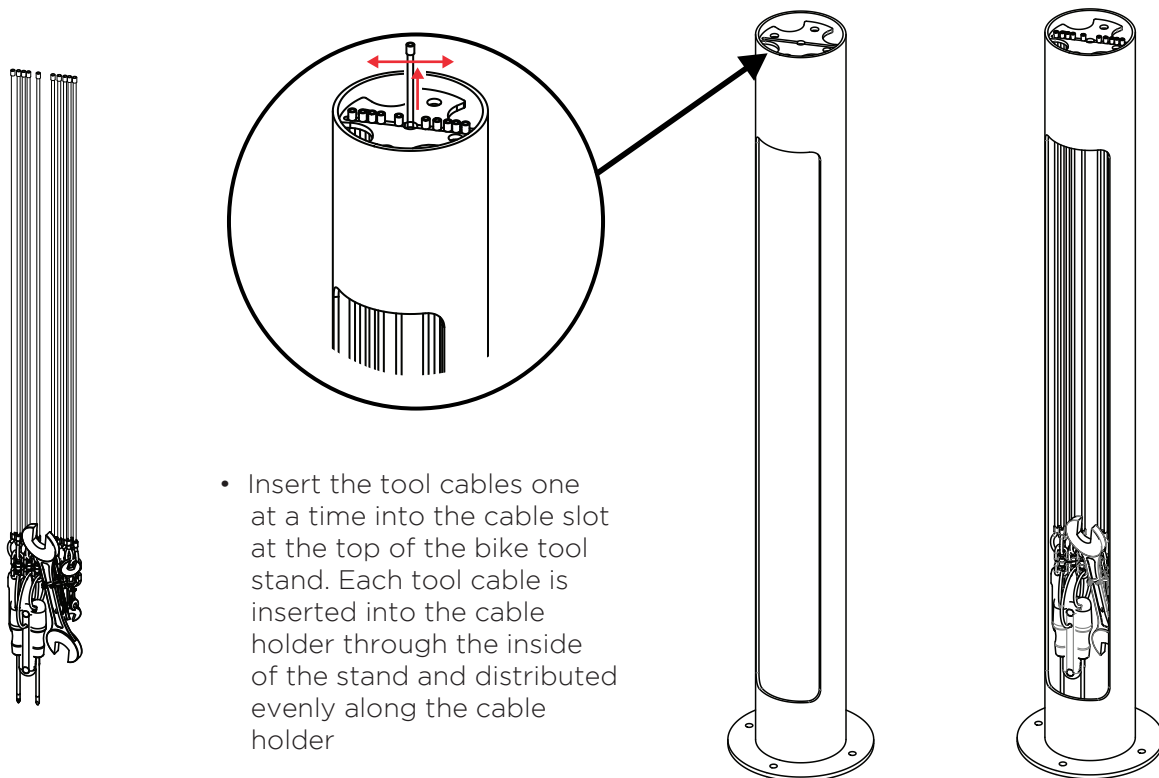


6. Attach the bike hanger

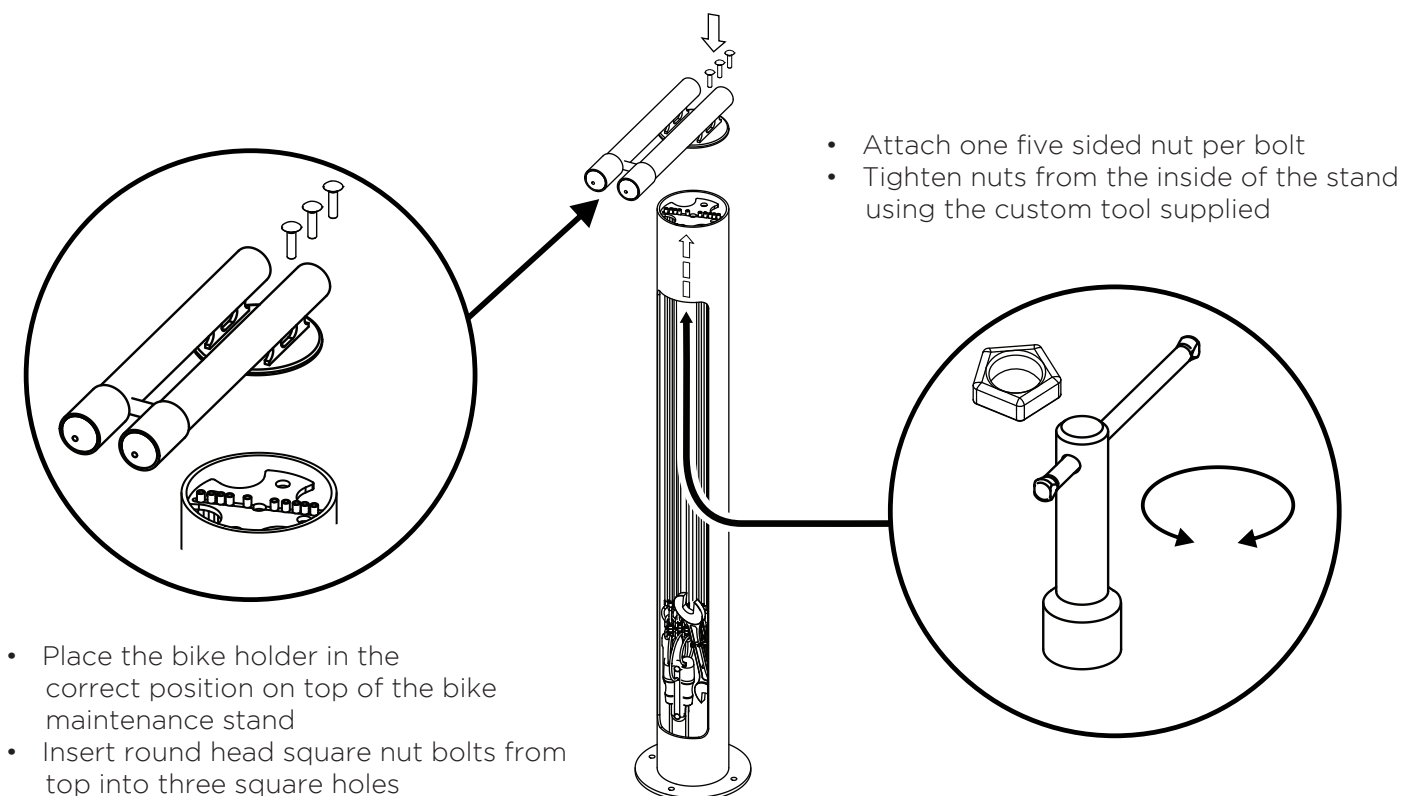

Bike Rack Installation Instructions

Cora Bike Rack - Bike Maintenance Stand

7. Installation complete

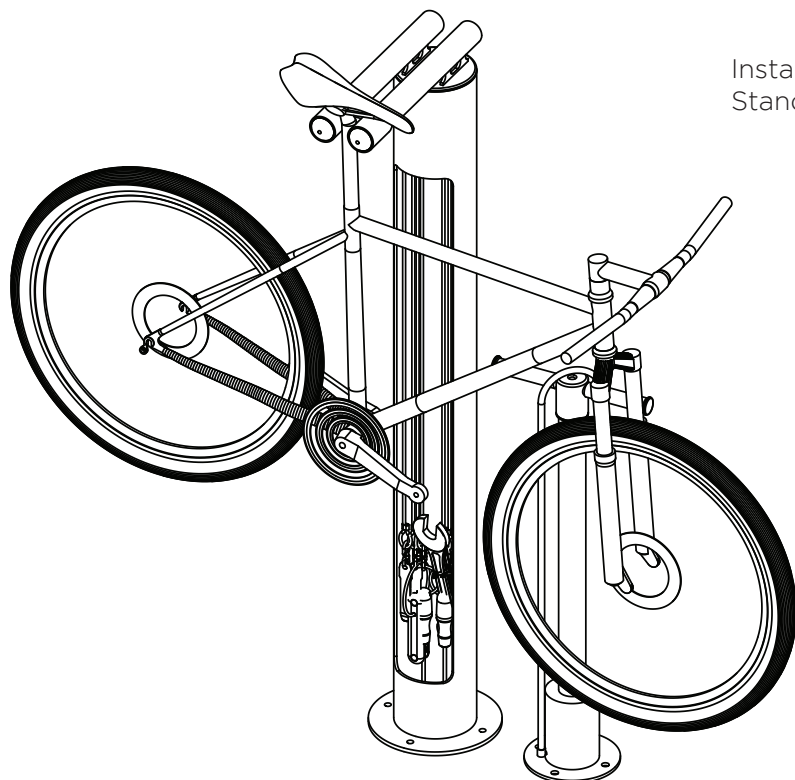

Installation of the Cora Bike Maintenance Stand is now complete



CORA
BIKERACK

PH 1800 249 878

sales@cora.com.au

www.cora.com.au